



Luminite Electronics Ltd.

2a Bellevue Road, London, N11 3ER

info@luminite.co.uk

02083687887

ESF - 1 / ESF - 4

Easy Switch Wireless



Easy Switch Instructions

www.luminite.co.uk

The ESF-4/ESF-1 wireless key fob transmitter has four buttons/one button which allow the user to operate receivers independently. The key fob will work in conjunction with EST-1 wall switch transmitters and ESD-1 PIR detectors and can operate the ESR-1, ESR-2 and ESR-4 receivers.

NB: You can operate as many receivers as you want and by selecting the receiver MODE the switch can act either as a single way, two-way switch, or mimic mode however it is recommended that the receiver be set to MODE 2 when used with key fobs. The receiver can only learn one button on each key fob, but it can learn up to 16 key fobs and wall switches.

Technical Data

Operating voltage 12 volts from 1 x 23A type alkaline battery

Battery life approximately two years depending on use.

Temperature range -10 to +40C

Standards MPT1340

Frequency 433.9Mhz

Transmission range 100 to 250 metres max line of sight depending on receiver used.

Garage doors and electric gates

Use an ESR-1, ESR-2 or ESR-4 type receiver which provides momentary contact closure each time the key fob button is pressed

Lighting control

Use an ESR-1, or ESR-4 type receiver which have latching contacts which remain closed when the key fob button is pressed and will open when it is pressed again and are mains capable.

Learning the switch code

1. Press the LEARN button on the receiver. The learn LED will light.
2. Operate the key fob button which is to work with this receiver. The learn LED will flash and go out indicating that the code has been learnt.
Operate the button again and observe the mode led.
3. Carry out range testing.

Range testing

Do not fit the receiver permanently in position until a range test has been successfully completed. Place the receiver in the position where you want it to be. Now take the key fob to the furthest point where it is to be used and operate the button. Check if lights come on. Repeat this test until you are satisfied that the system works 100% and then fit the receiver permanently in position.

Transmission range

For best results, hold the key fob vertically with the buttons facing you. A small improvement can be achieved by holding the fob above head height.

Battery

For replacement battery use type 23A 12-volt alkaline battery or equivalent. Battery life is usually about two years but is dependent on usage.

For technical assistance, please call 0208 361 5255

Easy Switch Instructions

www.luminite.co.uk