

NX-HEAT / NX-SMOKE ALERTEX



How to pair Alertex Heat and Smoke detectors with the Alertex system

- 1.** Fit the CR123A lithium battery into the battery holder, observing correct polarity
- 2.** The unit will flash the red LED 3 times to indicate start-up
- 3.** Hold the BUT1 button down until the red LED starts flashing quickly and then release it
- 4.** Press the BUT1 button quickly 7 times to start programming the unit
- 5.** Wait until the red LED starts flashing quickly
- 6.** Enter the SITE value first by pressing the BUT1 button (press 1x for SITE 1, 2x for SITE 2, 3x for SITE 3, etc.)
- 7.** Wait until the red LED starts flashing quickly
- 8.** Secondly, enter the SUBNET value by pressing the BUT1 button (press 1x for SUBNET 1, 2x for SUBNET 2, 3x for SUBNET 3, etc.)
- 9.** Wait until the red LED starts flashing quickly
- 10.** Lastly, enter the UNIT value by pressing the BUT1 button (press 1x for UNIT 1, 2x for UNIT 2, 3x for UNIT 3, etc.)
- 11.** The unit will then restart with the updated values and the red LED will flash 3 times

Note: Removing the battery whilst in the middle of programming will reset the unit to its' default settings